

Item number:51028

TENERGY®


USB Power Bank

USER MANUAL

Welcome

Thank you for purchasing the Power Bank. Please read the user manual carefully before your operation and keep it in proper place for your future reference.

Product Layout

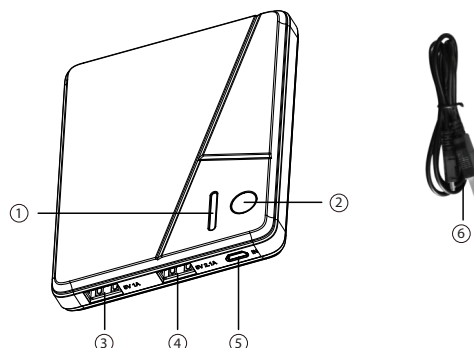

- (1) LED Indicator
- (2) Button
- (3) USB Output Port 2
- (4) USB Output port 1
- (5) Micro USB input Port
- (6) Micro USB cable

Specifications

Product name: USB Power Bank
Cell type: li-polymer battery
Battery Capacity: 7000mAh/3.7V
Input Voltage: DC 5.0V
Input Current: Max 1000mA
Output Voltage: DC 5.0V
Output Current: Output 1 current: 2.1A (best for tablets)
Output 2 current: 1A (best for smartphones)
Charging time: about 10 hours
Dimension: 113×88.5×15.5mm
Weight: approx. 200g

Information

Using your Power Bank

(1) You can use the specified USB cable to charge the

Power Bank with USB charger or PC's USB port.

Note: In charging, the indicator LED is blinking cyclically. Once Power Bank is fully charged, all LEDs will light up and stop charging.

(2) Connect Power Bank to iPad, cell phone or digital devices using the USB cable, press the button, it will be charging. If there is no load for 10 seconds, the output will be shut off automatically.

Battery Capacity Indicator

LEDs indicate the Power Bank charging status & battery power level.

100% --- ALL FOUR LED lighting

80%~100% --- LED 1 to 3 lighting, LED 4 flashing

50%~80% --- LED 1 to 2 lighting, LED 3 to 4 flashing by turns

20%~50% --- LED 1 lighting, LED 3 to 4 flashing by turns

0%~20% --- LED 1 to 4 flashing by turns

Maintenance

Keep your power Bank operating to its fullest potential, make sure to do as following:

1. Re-charge your power Bank once every three months when it is not in use.
2. Keep your power Bank dry and away from moist and corrosive materials.
3. Do not wash the power Bank with harsh chemicals, soaps or detergents.

Package Contents Included

- Power Bank
- USB Cable
- User Manual

Warning

Read all instructions and warnings prior to using this product.

Failure to read and follow these safety instructions could result in fire, explosion, electrical shock or other hazard, causing serious and/or fatal injury and/or property damage.

1. Do not modify, disassemble, open, drop, crush, puncture or shred the product
2. Do not expose the product to rain or water
3. Keep away from open flame or sunlight to prevent heat build-up
4. Keep away from high voltage devices
5. This product is not a toy, keep away from children. Insure that all persons who use the product read and follow these warnings and instructions